


Remote Control Instructions

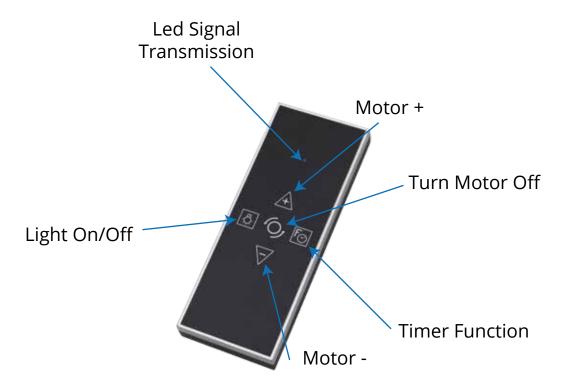

Frequency: 433,92 MHz

Voltage: 3V

Power Type 23 A

- Temperature range: +5°C / +45°C

Programming/Pairing

Keep pressing the + button of the remote control and then connect the cooker hood to the mains power.

To confirm that the remote control has been recognized a long beep is issued.

If you do not hear the acoustic signal within 30 seconds, please repeat the steps as described.

⁻ Change battery every 18 months